


Dimensions

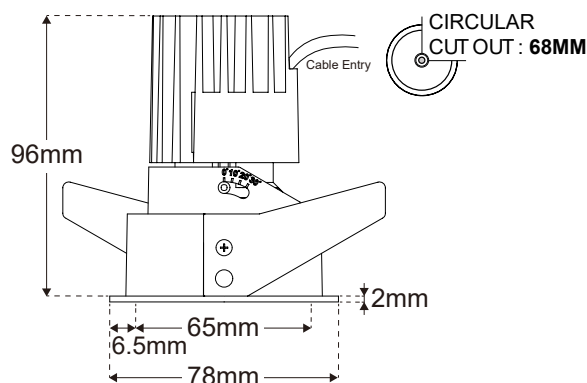


Instructions

Please ensure the power supply is fully switched off before carrying out any installation work.


Step 1 – Prepare the Fixture

Twist or pull the front bezel/trim away from the main body of the luminaire to remove it. Check that the ceiling cut-out matches the required size, and ensure the surrounding surface is clean and free from debris.

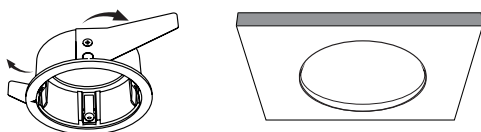


Step 2 – Insert the Luminaire Body

Position the main body of the luminaire into the ceiling cut-out, ensuring it sits correctly.

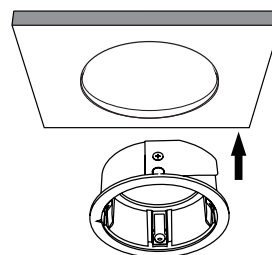


Step 3 – Connect the Mains Supply

Pass the mains cable through the luminaire opening and connect the driver wiring to the mains supply in accordance with the wiring regulations.

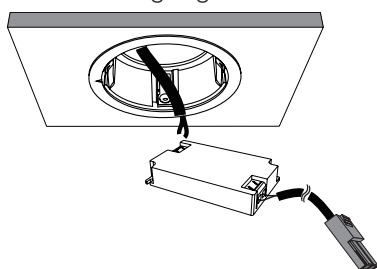


Step 4 – Connect the Driver to the Luminaire

Attach the luminaire's connector to the LED driver, ensuring a firm and secure connection.

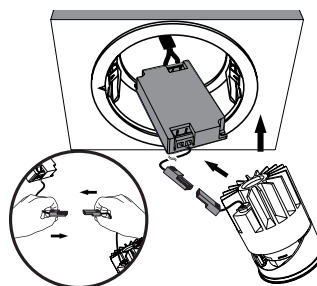


Step 5 – Position the Driver in the Ceiling

Feed the LED driver through the ceiling cut-out and place it safely within the ceiling void, ensuring cables are not pinched or overstretched.

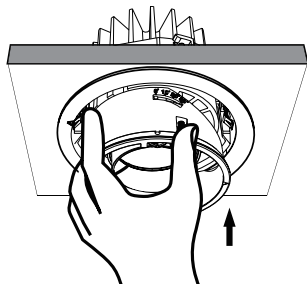

Step 6 – Secure the Luminaire


Compress the spring clips on both sides of the luminaire and push the unit into the ceiling. The springs should engage with a clear click.

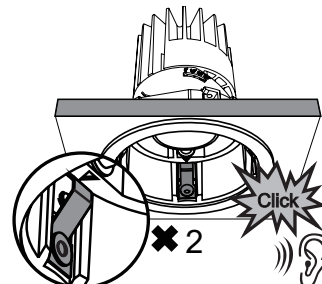

Instructions Continued


Step 7 – Adjust the Light

Tilt or rotate the light module as required to suit your application.

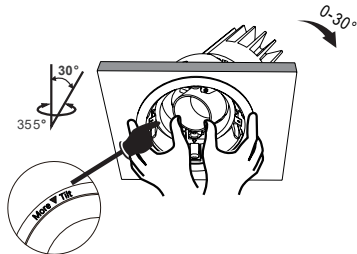


Step 8 – Refit the Bezel

Align the bezel with the front of the fixture and push it back into place. Ensure it locks securely and sits flush with the ceiling.

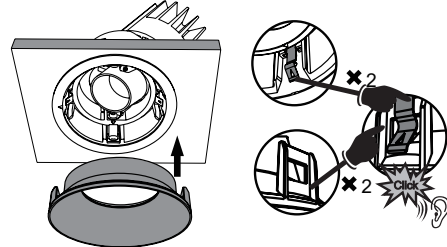


Step 9 – Restore Power

Check that the installation is secure, then switch the mains power back on and verify correct operation.

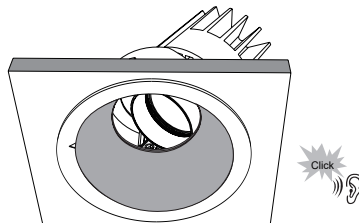

Maintenance

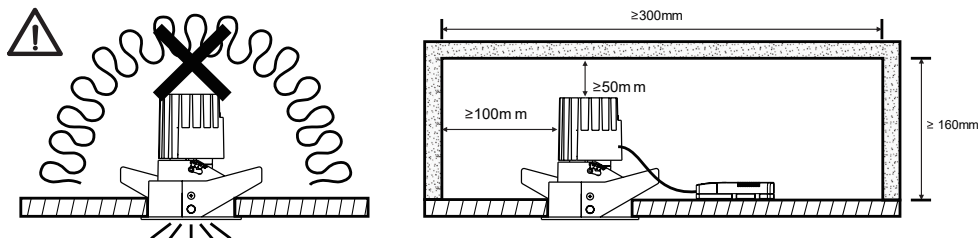

- Do not cover the luminaire or its driver with insulation.
- Maintain a minimum clearance:
 - ≥50 mm above the luminaire.
 - ≥100 mm from nearby objects or heat-sensitive materials.
- Ensure the void depth meets the manufacturer's requirements for safe airflow and heat dissipation.

Disclaimer

This product must be installed by a skilled or instructed person in accordance with the current edition of the IET Wiring Regulations BS 7671 "Requirements for Electrical Installations" and the Buildings Regulations, as may be applicable subject to the location and country of the installation.

Should this product be modified, misused or not installed as per the instructions given, the product warranty shall be rendered void.

All information contained within these installation instructions manual is provided in good faith. Orlight shall not be held responsible for any losses incurred as a result of the Customer's failure to follow the instructions manual thoroughly and in its entirety or failing to inspect the product for missing parts and/or any defects prior to installation.

For full Terms and Conditions, please visit our website at: <https://www.orlight.com/en/terms-and-conditions.html>

Disclaimer

Hole Cut Out:

Orlight does not recommend cutting of holes prior to receipt of product in hand. Please refer to reverse or Orlight's technical support/website for recommended hole cut out.

Wiring:

Disconnect the mains supply before installation. Ensure that the unit is installed and maintained by a certified professional and that installation conforms to any local building control standard applicable.

Accessories:

Please ensure that any accessory used in conjunction with these products is approved by Orlight. Failure to do so will void any product guarantee. Orlight will not be held responsible for any loss incurred be it direct or consequential.

NOTE – Light fittings in general can become hot whilst in operation. It is advisable that they do not come into contact with any flammable materials such as fabrics, furniture, soft furnishings or touched during/after operation.