


INSTALLATION INSTRUCTIONS

IP65 DOWNLIGHT


SHOWERSPOT

INSTALLATION - Orlight does not recommend the cutting of holes prior to receipt of product in hand. Please see reverse for full instructions.

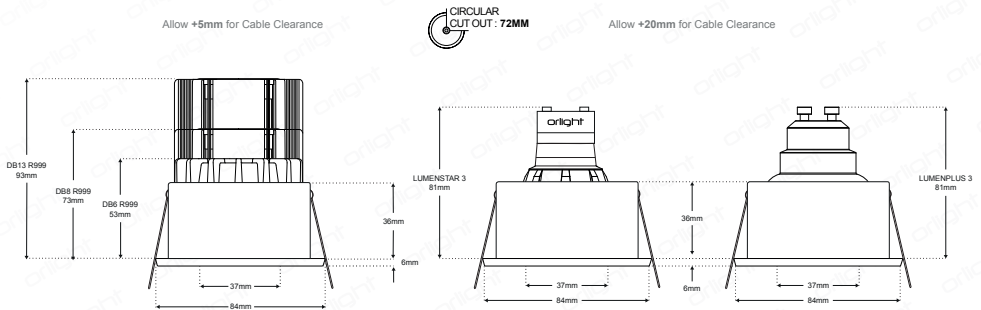

LAMP MAINTENANCE - The lamp holder can be easily removed from the face of the fitting. Use a flat blade tool to lever down one side, then evenly pull the holder downwards to remove it from the fitting .

The lamp and holder will pull through as one, take care not to damage any wires. Change with any compatible orlight dimmable lamps listed below.

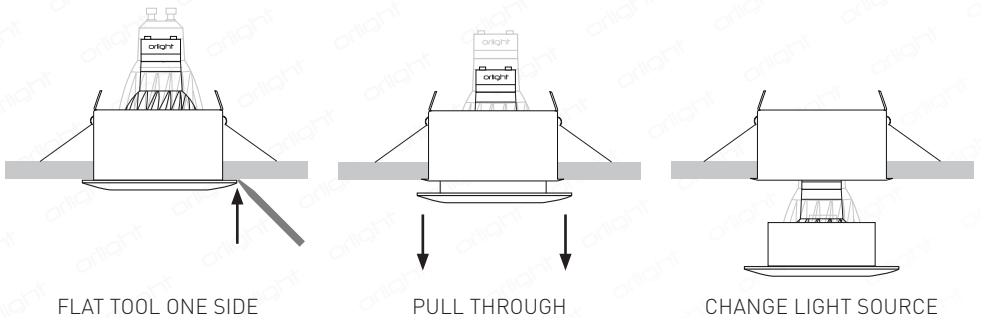

This product must be installed by a skilled or instructed person in accordance with the current edition of the IET Wiring Regulations BS 7671 "Requirements for Electrical Installations" and the Buildings Regulations, as may be applicable subject to the location and country of the installation.

Should this product be modified, misused or not installed as per the instructions given, the product warranty shall be rendered void.

All information contained within these installation instructions manual is provided in good faith. Orlight shall not be held responsible for any losses incurred as a result of the Customer's failure to follow the instructions manual thoroughly and in its entirety or failing to inspect the product for missing parts and/or any defects prior to installation.

For full Terms and Conditions, please visit our website at:
<https://www.orlight.com/terms-and-conditions>

Hole cut out:

Orlight does not recommend cutting of holes prior to receipt of product in hand. Please refer to reverse or Orlight's technical support/website for recommended hole cut out.

Wiring:

Disconnect the mains supply before installation. Ensure that the wires is installed and maintained by a certified professional and that installation conforms to any local building control standard applicable.

a. For low voltage installation:

Connect the mains supply to the Orlight driver. Insert the lamp within the inner ring and connect to lamp holder. Attach the springs to the lamp holder thereby holding the lamp securely. Insert inner ring into its outer ring counterpart, which will consequently be held in place magnetically.

b. Mains installation:

Connect the mains to the terminal block provided. Insert the lamp within the inner ring and connect to lamp holder. Attach the springs to the lamp holder thereby holding the lamp securely. Insert inner ring into its outer ring counterpart, which will consequently be held in place magnetically.

Lamp replacement:

Please ensure to disconnect the mains supply prior to re-lamping. Carefully remove the downlight from the ceiling to expose the lamp within the lampholder. Gently release the lamp from the downlight, then proceed to remove the existing lamp from its lampholder and dispose of appropriately. Insert the re-placement lamp into the lampholder and secure the new lamp into the downlight, then re-insert fixture.

NOTE – Light fittings in general can become hot whilst in operation. It is advisable that they do not come into contact with any flammable materials such as fabrics, furniture, soft furnishings or touched during/after operation.