

orlight®

FROM SOURCE TO SITE

 
Installation instructions

IP65 DOWNLIGHT

STEAMSPOT


INSTALLATION – Orlight does not recommend the cutting of holes prior to receipt of product in hand. Please see reverse for full instructions.

Allow +5mm for Cable Clearance

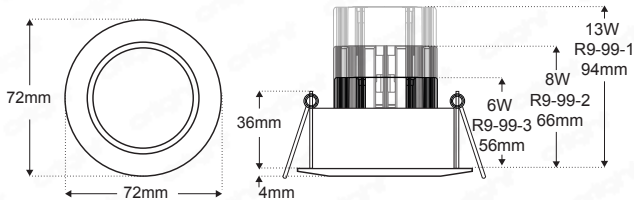


LAMP MAINTENANCE - If the lamp is not readily accessible from above, the fitting has to be completely removed from below. This requires care in order not to damage the ceiling. Use a large flat blade tool to lever down one side of the fitting, place a small batten or pencil to hold the bezel away from the ceiling.

 
Then use the flat bladed tool to lever the other side of the fitting down. Taking care, to avoid damaging the ceiling. Evenly pull the whole fitting away from the ceiling, this may require some force to bend the springs fully back. Be careful to avoid the spring folding back and pinching your fingers.

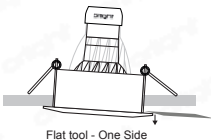


Flat tool - One Side

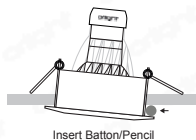 

Insert Batten/Pencil

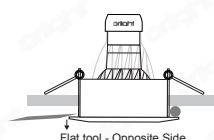 

Flat tool - Opposite Side

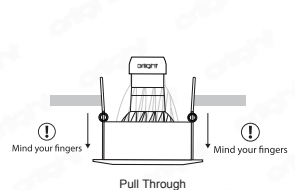 

Pull Through



Please note: The above standards are dependent on the fixture option selected from the range. PLEASE OBSERVE MAXIMUM WATTAGES AS STATED ON FIXTURES.

Compatible Orlight dimmable lamps (may require mains converter) :

5W CR-5

7W LUMENSTAR

7W MTG2PLUS

7W MTG2

R9-99





FROM SOURCE TO SITE

We recommend that this product is installed by a competent person in accordance with the latest edition of the IET Wiring Regulations BS 7671 "Requirements for Electrical Installations" and the Buildings Regulations, as may be applicable subject to the location and country of the job or installation.

For more information and installation guide lines please refer to "Guide on Lighting Risks and Regulations" which can be downloaded from the website:

https://www.orlight.com/content/files/orlight/resources/Guide_on_Lighting_Risks_and_Regulations_2020.pdf

Hole cut out:

Orlight does not recommend cutting of holes prior to receipt of product in hand. Please refer to reverse or Orlight's technical support/website for recommended hole cut out.

Wiring:

Disconnect the mains supply before installation. Ensure that the unit is installed and maintained by a certified professional and that installation conforms to any local building control standard applicable.

For low voltage installation:

Connect the mains supply to the Orlight transformer and 12v supply from the Orlight transformer to the terminal block provided. Insert the lamp into the fixture and connect to lamp holder. Attach the retaining springs to the lamp holder, thereby holding the lamp securely. Fold the main springs back and insert the fixture into the ceiling void.

Mains installation:

Connect the mains to the terminal block provided. Insert the lamp into the fixture and connect to lamp holder. Attach the retaining springs to the lamp holder, thereby holding the lamp securely. Fold the main springs back and insert the fixture into the ceiling void.

Lamp replacement:

Please ensure to disconnect the mains supply prior to re-lamping. Release the fixture by carefully lowering it, proceed to remove the existing lamp from its lampholder and dispose of appropriately. Insert the replacement lamp into the lampholder and gently place the fixture back into the ceiling void.

Accessories:

Please ensure that any accessory such as **firehoods** used in conjunction with these products is approved by Orlight. Failure to do so will void any product guarantee. Orlight will not be held responsible for any loss incurred be it direct or consequential.

Insulation:

Fitting requires a minimum recess depth and surrounding materials must be removed by 150mm from all outside edges of the fitting. Insulation must not be laid over the top of the fitting or fire hood.

NOTE – Light fittings in general can become hot whilst in operation. It is advisable that they do not come into contact with any flammable materials such as fabrics, furniture, soft furnishings or touched during/after operation.

*** Please note, all information contained within this instruction manual is provided in good faith. We will not be held responsible for any losses incurred as a result of any inaccuracies contained within this document.**