



orlight®

FROM SOURCE TO SITE

Installation instructions

TRIMLESS SQUARE DOWNLIGHT

ORL2018-1 / ORL2018BL-1 / ORL2018-1IP44 / ORL2018-2 / ORL2018BL-2 / ORL2018-2IP44

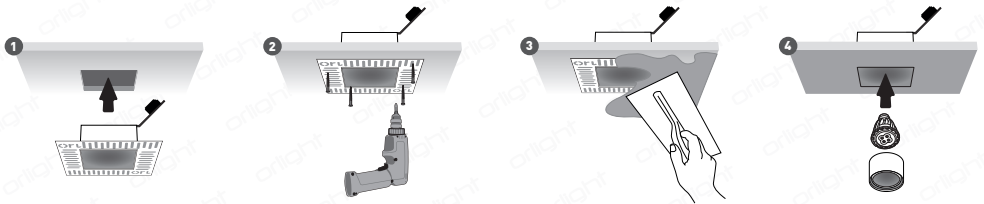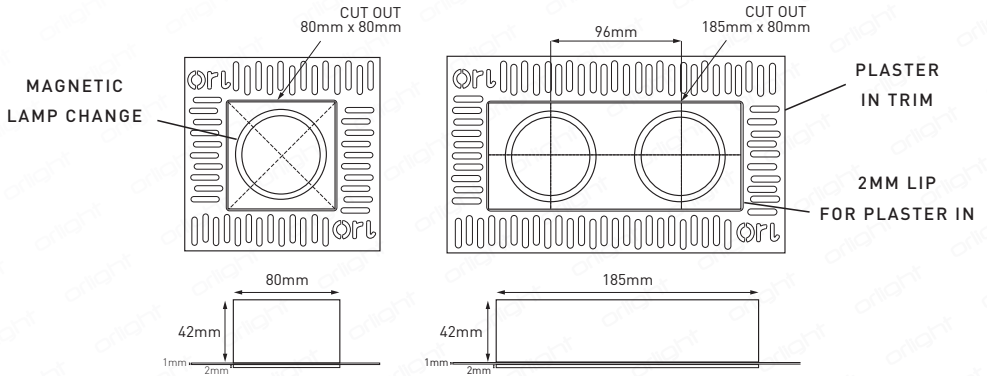

INSTALLATION - Cut out as per guide above, insert the fixture into place, secure with screws to hold in position and plaster over with quick drying plaster ensuring neatness of installation. Orlight does not recommend cutting of holes prior to receipt of product in hand. Please see reverse for full instructions.



Please note: The above standards are dependent on the fixture option selected from the range.

Compatible Orlight dimmable lamps (may require mains converter) :

5W CR-5

7W LUMENSTAR

7W MTG2PLUS

7W MTG2

R9-99



www.orlight.com | 01923 851 890



FROM SOURCE TO SITE

We recommend that this product is installed by a competent person in accordance with the latest edition of the IET Wiring Regulations BS 7671 "Requirements for Electrical Installations" and the Buildings Regulations, as may be applicable subject to the location and country of the job or installation.

For more information and installation guide lines please refer to "Guide on Lighting Risks and Regulations" which can be downloaded from the website: https://www.orldight.com/content/files/orldight/resources/Guide_on_Lighting_Risks_and_Regulations_2020.pdf

Hole cut out:

Orlight does not recommend cutting of holes prior to receipt of product in hand. Please refer to reverse or Orlight's technical support/website for recommended hole cut out.

Wiring:

Disconnect the mains supply before installation. Ensure that the unit is installed and maintained by a certified professional and that installation conforms to any local building control standard applicable.

For low voltage installation:

Connect the mains supply to the Orlight transformer and 12v Supply from the Orlight transformer to the terminal block provided. Insert the lamp within the inner ring and connect to lamp holder. Insert inner ring into its outer ring counterpart, which will consequently be held in place magnetically. The fixture maybe rotated and tilted to direct light as required, depending on fixture type chosen.

Mains installation:

Connect the mains to the terminal block provided. Insert the lamp within the inner ring and connect to lamp holder. Insert inner ring into its outer ring counterpart, which will consequently be held in place magnetically. The fixture maybe rotated and tilted to direct light as required, depending on fixture type chosen.

Lamp replacement:

Please ensure to disconnect the mains supply prior to re-lamping. Release lamp holding mechanism from the main body of the fixture. Gently lower the inner ring of the fixture, proceed to remove the existing lamp from its lampholder and dispose of appropriately. Insert the replacement lamp into the lampholder and gently place the lamp mechanism into the main frame of the fixture.

Accessories:

Please ensure that any accessory such as firehoods used in conjunction with these products is approved by Orlight. Failure to do so will void any product guarantee. Orlight will not be held responsible for any loss incurred be it direct or consequential.

Insulation:

Fitting requires a minimum recess depth and surrounding materials must be removed by 100mm from the outside edge of the fitting. Insulation must not be laid over the top of the fitting or fire hood.

NOTE – Light fittings in general can become hot whilst in operation. It is advisable that they do not come into contact with any flammable materials such as fabrics, furniture, soft furnishings or touched during/after operation.

* Please note, all information contained within this instruction manual is provided in good faith. We will not be held responsible for any losses incurred as a result of any inaccuracies contained within this document.



Great care must be taken when installing trimless fixtures:

Whilst plastering over any metallic structure care must be taken to ensure that no contact is made between plastering tool and metallic structure. This is to ensure that fixture is not damaged and no protective layering to the fixture is removed. Additional care must be taken to ensure the bead up to which the unit is plastered to is not damaged during the process. The bead is the most vulnerable part of the structure since this defines the plaster-in boundary.

Exposed metallic surfaces may react with chemicals and water content within plaster content. As such it is imperative to ensure no metallic structure is damaged or exposed since this may result in discolouration over time.