


ORL4AB

Installation Instructions

Dimensions

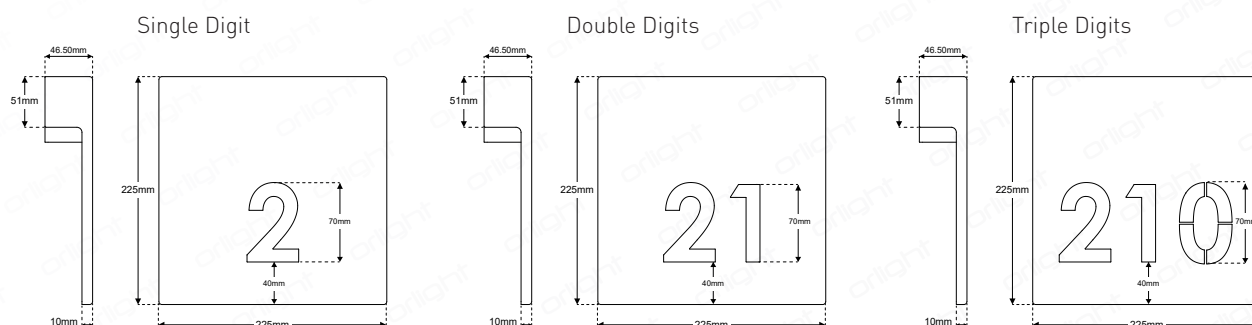


Wiring

Disconnect the mains supply before installation. Ensure that the unit is installed and maintained by a certified professional and that installation conforms to any local building regulations.


Note: Light fittings in general can become hot whilst in operation. It is advisable that they do not come into contact with any flammable materials such as fabrics, furniture, soft furnishings or touched during/after operation.

Installations


Step 1: Ensure that the power source is accessible and switched off. Drill holes in the wall, using the product back plate for guidance.

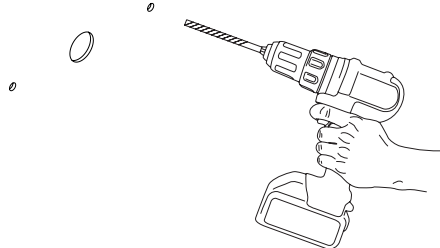


Step 2: Mount the product back plate to the wall using rawl plugs and screws.

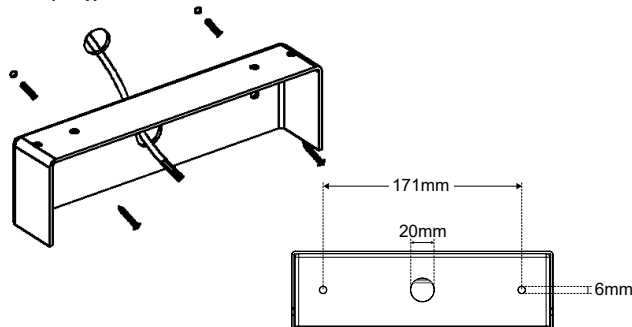


Step 3: Wire up to mains as per the below diagram.

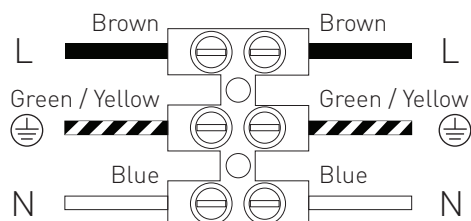

Step 4: Screw the profile onto the product back plate, ensuring the light source projects towards the wall.

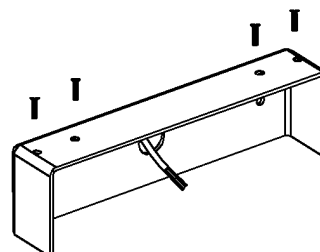

Step 5: Screw the body onto the back plate.

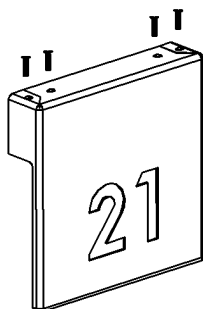

Step 6: Ensure the connection is OK, then turn on the power.



Additional Information

This product must be installed by a skilled or instructed person in accordance with the current edition of the IET Wiring Regulations BS 7671 "Requirements for Electrical Installations" and the Buildings Regulations, as may be applicable subject to the location and country of the installation.

Should this product be modified, misused or not installed as per the instructions given, the product warranty shall be rendered void.

All information contained within these installation instructions manual are provided in good faith. Orlight shall not be held responsible for any losses incurred as a result of the Customer's failure to follow the instructions manual thoroughly and in its entirety or failing to inspect the product for missing parts and/or any defects prior to installation.

For full Terms and Conditions, please visit our website at: <https://www.orlight.com/terms-and-conditions>