


ULTRA-LOURVE

Installation Instructions

General Safety Information

- Installation, commissioning and maintenance only by qualified electrician.
- Never perform any work on the luminaire with voltage applied. Danger to life due to electric shock!
- Electric connection must be appropriate according to all applicable standards and other national and international safety and accident prevention regulations.
- Damaged luminaires must not be operated.
- Observe and retain safety instructions and mounting instructions
- No liability is accepted for damages resulting from improper use.
- Use genuine parts only for repair.


Instructions

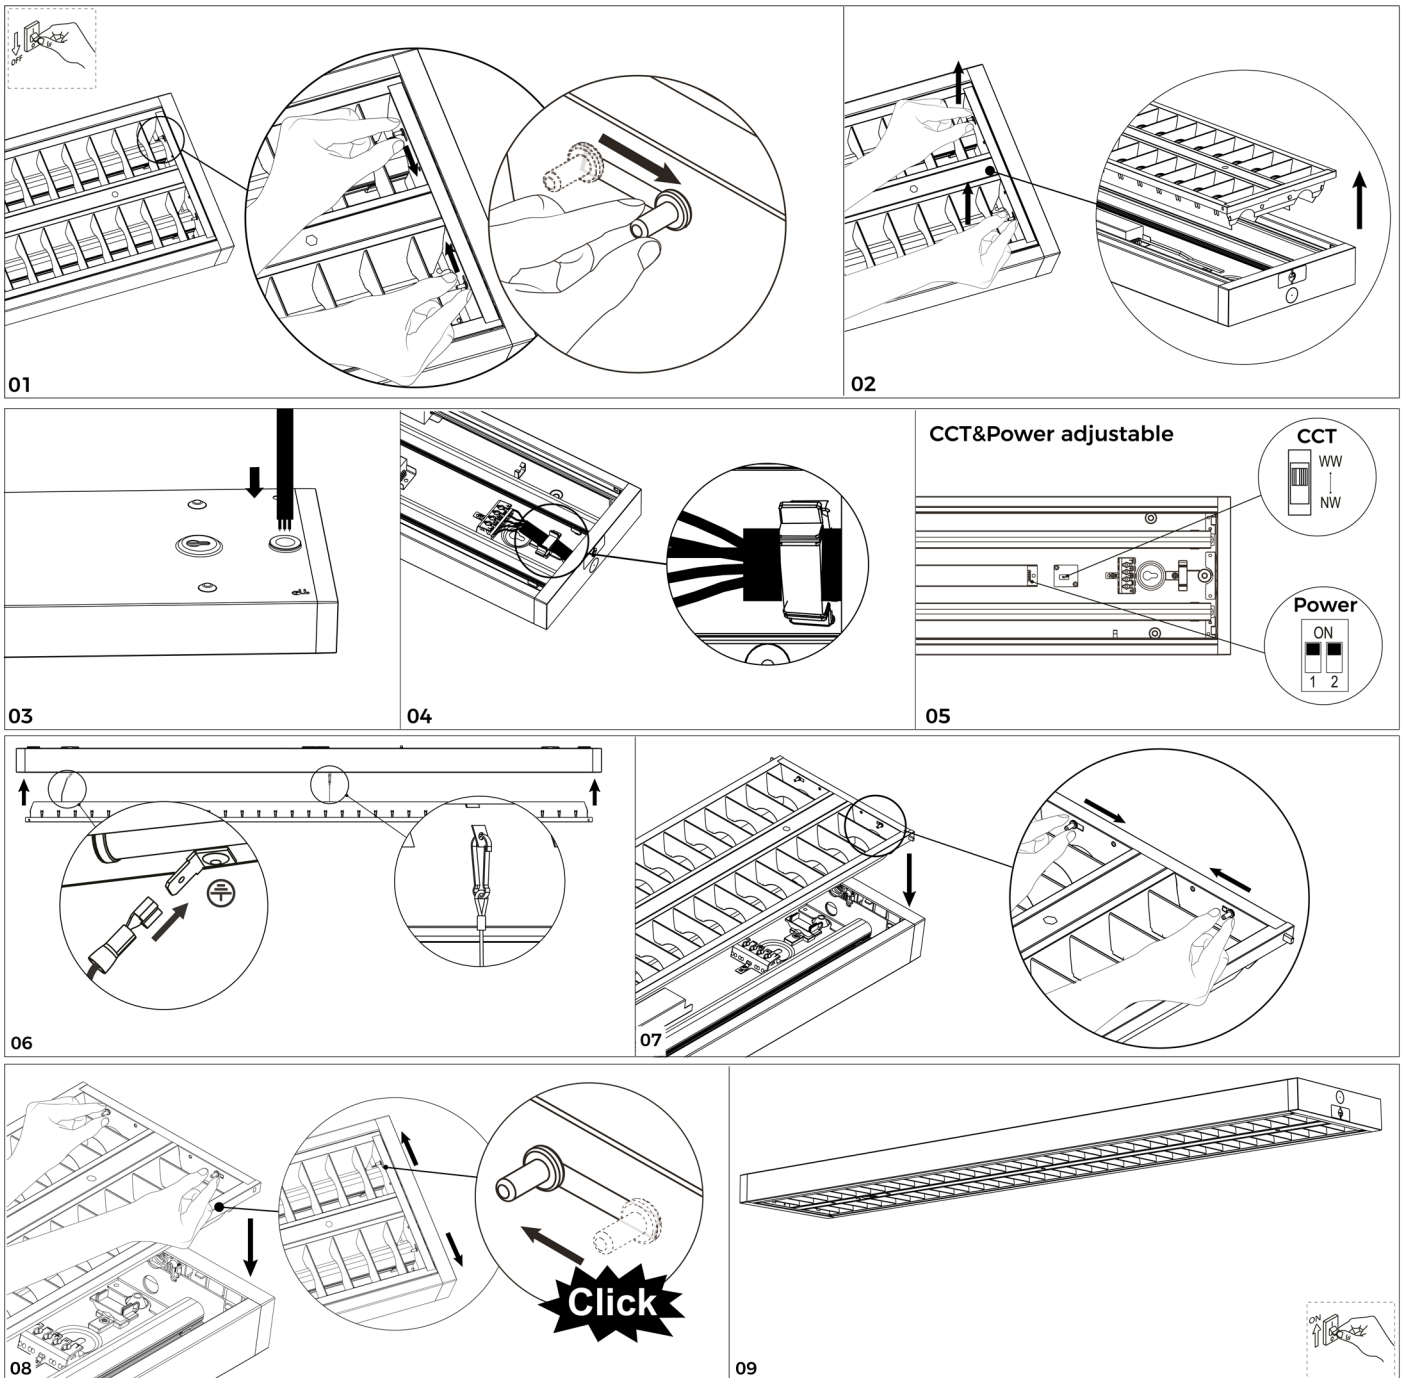



ULTRA-LOURVE

Installation Instructions

Instructions Continued

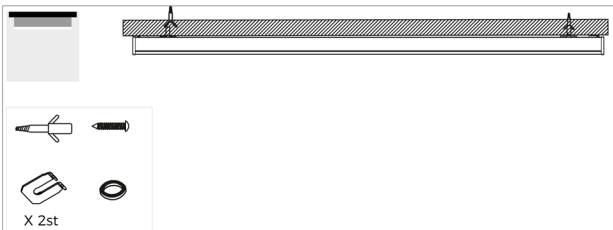

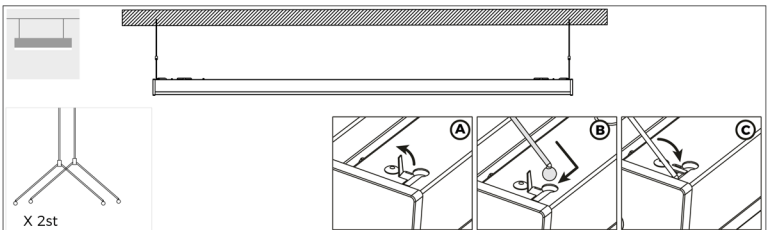


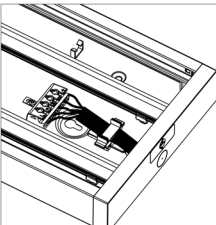

	mm
	mm ²
1-2.5	12


Dimmable

 Dim+
Dim-
E
N
L




DALI

 DA
DA
E
N
L




3 wires

 L
E
N




5 wires

 L2
L1
E
N
L3




Emergency

 PL
SL
E
N




PL for emergency permanent live wire

Circuit breakers

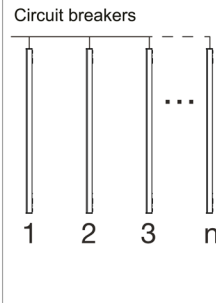

		B10	B16	C10	C16
ON/OFF	35W	23	37	38	62
	50W	16	27	28	45
DALI	35W	19	31	32	52
	50W	11	18	19	30

Linkable qty

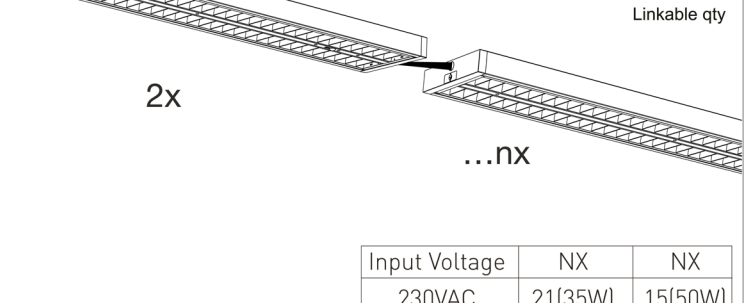


2x ...nx


Input Voltage	NX	NX
230VAC	21(35W)	15(50W)

Instructions for Replacement

- Open the end cap and remove the diffuser;
- Screw out the fixing screws on PCB board and LED driver;
- Replace the LED module and driver with new one;
- Put back the diffuser and lock the end cap.

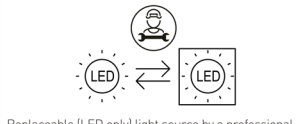

Replaceable (LED only) light source by a professional.

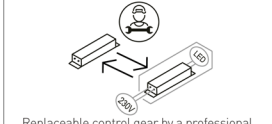

Replaceable control gear by a professional.

This product contains a light source of energy efficiency class . (3000K/4000K)

