


Dimensions

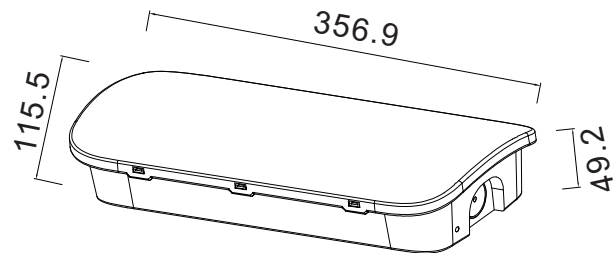


220-240VAC
50/60Hz

Instructions


Step 1 – Disconnect Power

Switch off and isolate the luminaire from the mains power supply before starting installation.

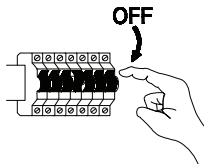


Step 2 – Remove the Front Cover Screws

Loosen and remove the front cover.

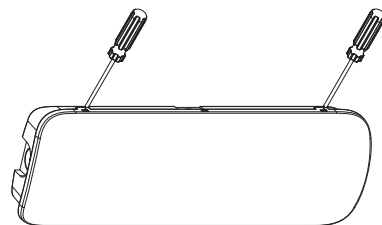


Step 3 – Remove the Front Cover

Carefully detach the front cover from the housing to expose the internal components.

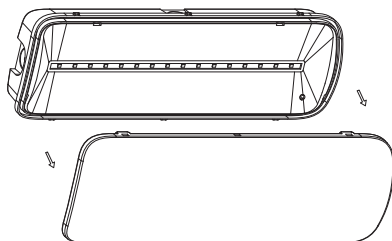


Step 4 – Remove Internal Diffuser/Tray

Lift out the internal diffuser or tray to allow access to mounting and wiring points.

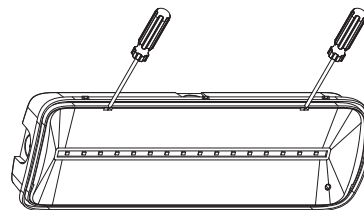


Step 5 – Prepare Housing for Mounting

Check the housing is free from debris and ready for installation.

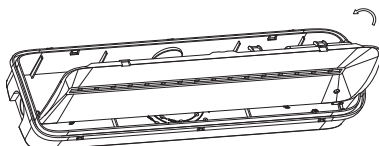

Step 6 – Mark and Drill Mounting Points


Using the housing as a guide, mark the mounting hole positions (254 mm centres). Drill and insert suitable wall plugs or anchors.

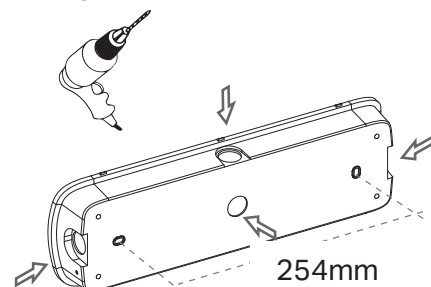

Instructions Continue


Step 7 – Make Electrical Connections

- **Non-Maintained mode:** Disconnect the SL (switched live) connection.
 - **Maintained mode:** Connect the SL terminal.
- Ensure wiring is correct and secure.

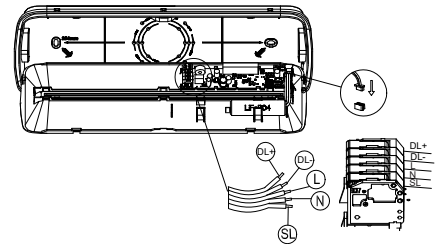


Step 8 – Secure the Housing

Fix the housing onto the prepared mounting surface using screws.

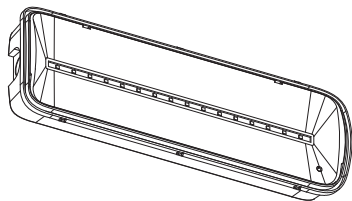


Step 9 – Place the Desired Legend

Place the chosen directional or safety legend into position.

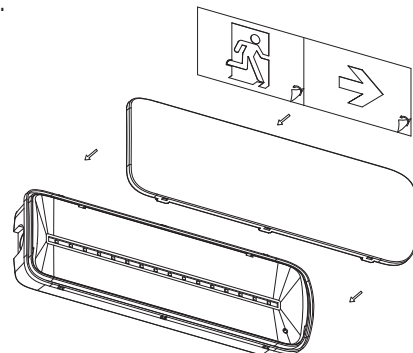


Step 10 – Refit Diffuser and Front Cover

Reinstall the internal diffuser/tray, then replace and secure the front cover.

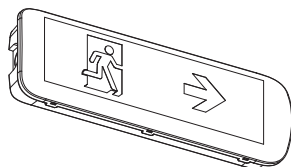


Step 11 – Restore Power and Test

Reconnect the mains supply, switch on, and perform a functional test to ensure correct operation.

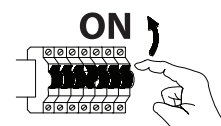

Battery Replacement


18650 LiFePO4 3.2V 3000mAh

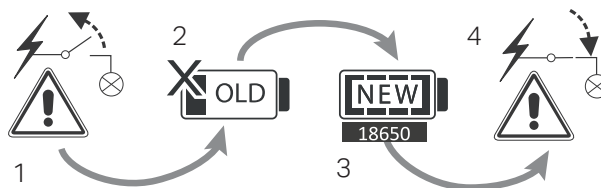

Important Notes

All maintenance, such as changing the batteries or light source on this luminaire, should only be performed by professionals. Before maintenance, please disconnect all power sources.

Mounting Accessories

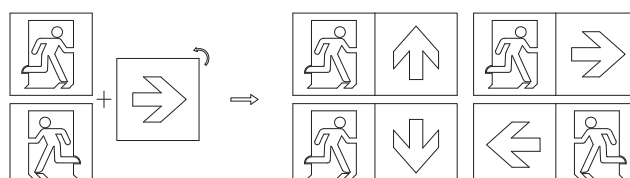

ALTO-DALI

Installation Instructions

Additional Information

- The electric source for safety service is not a user serviceable item and shall only be replaced by the manufacturer service agent or a similar qualified person.
- The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.
- The company accept no responsibility for incorrect installation, incorrect operation or improper maintenance.
- After installation of the fitting, the battery must be charged for 16/24 hours for duration test.
- Battery should be charged every three months in order to keep it's initial performance.