


TRIGUARD

Installation Instructions


Dimensions

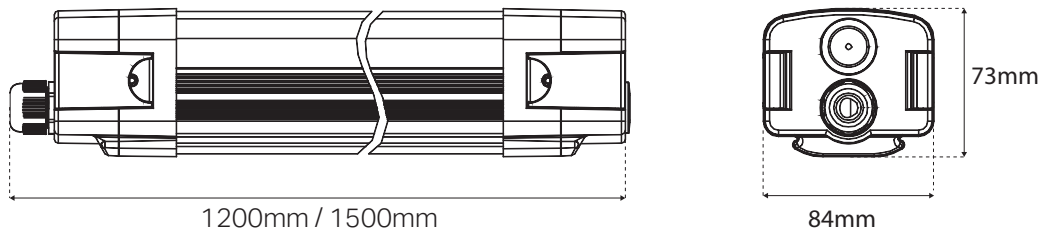


Instructions

Please ensure the power supply is fully switched off before carrying out any installation work.

Surface Mounting Procedure


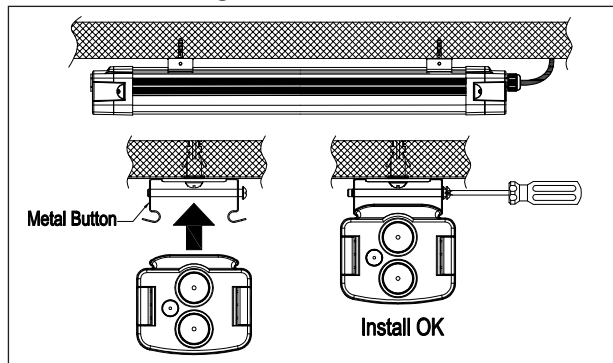


Suspension Procedure (Available Separately)

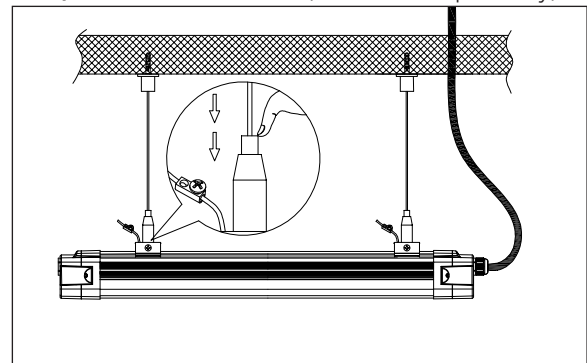


Wiring Requirements



1. Open the End Cap.
2. Open the waterproof connector and access the protective cable, wiring diagram as shown on the right and tighten the waterproof connector.

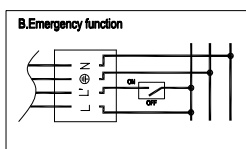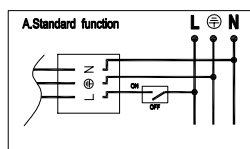

DALI Function

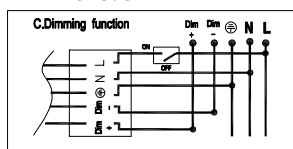


DALI Function

 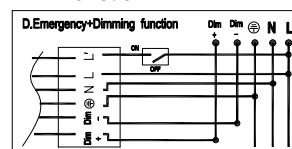

Connection Method

 1. Single side power input wiring:



2. The cover must be locked to ensure IP65 waterproof performance.

Caution


 
- Please power off before adjusting the parameters.
- Please make sure the end cap and waterproof connector be locked after wiring connection.

TRIGUARD



Installation Instructions

Function

Please follow the product label to choose the function.

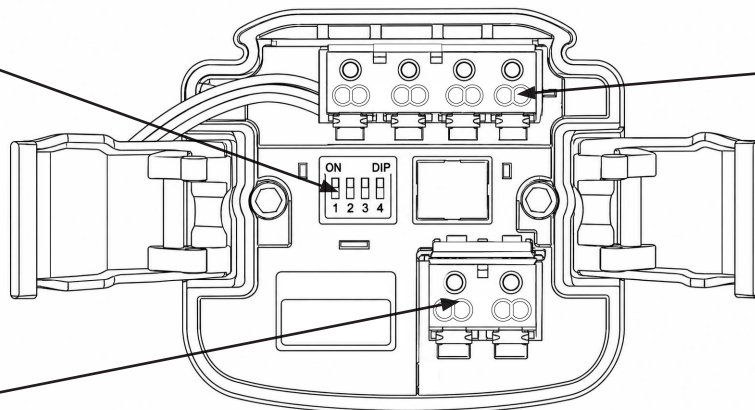

- Specific parameters is given priority to with product label.

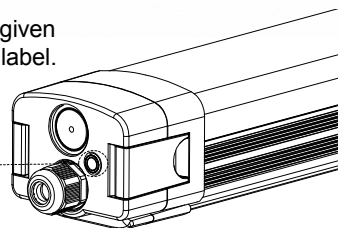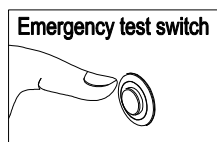


Emergency Parameters		
Emergency Time	3Hours	
Emergency power	3W	6W
Built-in Li-ion Battery	7.4V/2000mAh	11.1V/2500mAh
Recharge Time	≥24Hours	
Operation temperature	0°C~+50°C	


- Testing Procedures
 - Press the test button, switch the system to emergency mode, and the test light is off.
 - Release the test switch, switch the system to charging mode, and the test light is on.
 - For emergency mode, Press the test button switch for 3S, the system will close the emergency mode.
 - Allow 24 hour charge before conducting one hour test.

Parts Included

Standard Accessory

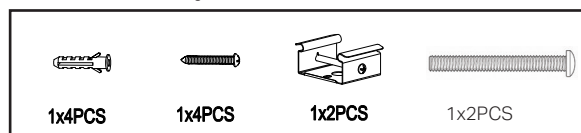

Suspension Accessory (Available Separately)

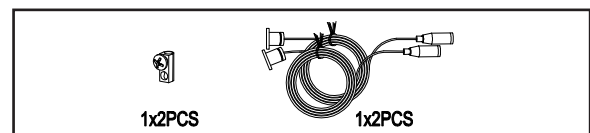

Notice

- Carefully read and follow all warnings and instructions before installing or servicing the luminaire.
- This luminaire must be directly wired on line. Any ballast or other power device previously used with the replaced luminaire must be removed.
- Always provide proper ventilation around the luminaire and do not exceed the maximum ambient temperature.

Disclaimer

This product must be installed by a skilled or instructed person in accordance with the current edition of the IET Wiring Regulations BS 7671 "Requirements for Electrical Installations" and the Buildings Regulations, as may be applicable subject to the location and country of the installation.

Should this product be modified, misused or not installed as per the instructions given, the product warranty shall be rendered void.

All information contained within these installation instructions manual is provided in good faith. Orlight shall not be held responsible for any losses incurred as a result of the Customer's failure to follow the instructions manual thoroughly and in its entirety or failing to inspect the product for missing parts and/or any defects prior to installation.

For full Terms and Conditions, please visit our website at: <https://www.orlight.com/en/terms-and-conditions.html>