


LUME SPOT - MINI

Installation Instructions

Dimensions

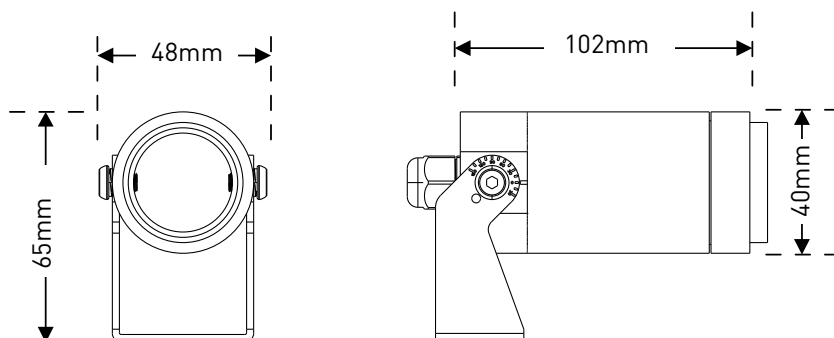

Installations

Step 1:	Step 2: A. Fix the installation bracket on the mounting surface	Step 3: B. Fix the installation bracket on the mounting surface
Step 4: C. Fix the installation bracket on the mounting surface	Step 5: Dismantle the light engine by loosening the screws	Step 6: Fix the installation bracket on the mounting surface
Step 7: Assemble back the light engine	Step 8: Connect the cable to terminal block	Step 9: Use the following connection style

LUME SPOT - MINI

Installation Instructions

Additional Information:

We recommend that this product is installed by a competent person in accordance with the latest edition of the IET Wiring Regulations BS 7671 "Requirements for Electrical Installations" and the Buildings Regulations, as may be applicable subject to the location and country of the job or installation.

Should this product be modified, misused or not installed as per the instructions given, the product warranty shall be rendered void.

All information contained within these installation instructions manual is provided in good faith. Orlight shall not be held responsible for any losses incurred as a result of the Customer's failure to follow the instructions manual thoroughly and in its entirety or failing to inspect the product for missing parts and/or any defects prior to installation.

For full Terms and Conditions, please visit our website at: <https://www.orlight.com/en/terms-and-conditions.html>

Hole cut out: Orlight does not recommend cutting of holes prior to receipt of product in hand. Please refer to reverse or Orlight's technical support/website for recommended hole cut out.

Wiring: Disconnect the mains supply before installation. Ensure that the unit is installed and maintained by a certified professional and that installation conforms to any local building control standard applicable.

Accessories: Please ensure that any accessory used in conjunction with these products is approved by Orlight. Failure to do so will void any product guarantee. Orlight will not be held responsible for any loss incurred be it direct or consequential.

NOTE – Light fittings in general can become hot whilst in operation. It is advisable that they do not come into contact with any flammable materials such as fabrics, furniture, soft furnishings or touched during/ after operation.