
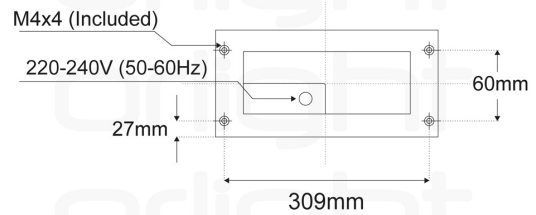


# ORL8736


## Installation Instructions

### Dimensions

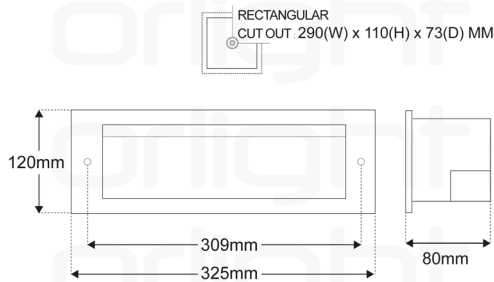

### Instructions

**Step 1:** Ensure the power supply is turned off at the mains before beginning any installation work.

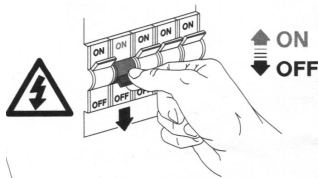


**Step 2:** Prepare Wall Opening: Cut an opening in the wall to the following dimensions:


ORL8736  
W x H x D  
292mm x 110mm x 80mm




**Step 3:** Ensure wires are thread through the conduit system. Allow enough cable for the following steps

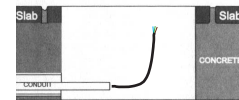


**Step 4:** Using the black box, feed the wall cable through the IP Grommet and secure in place. Then fix the box into the wall using the illustrated crew mount holes.

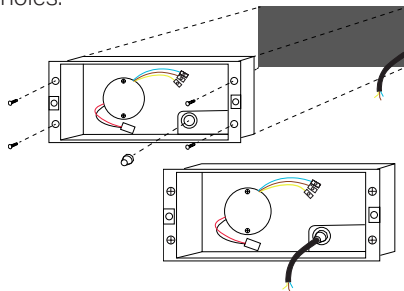


**Step 5:** Connect the electrical wires to the corresponding terminals, ensuring all connections are tight and correctly terminated.

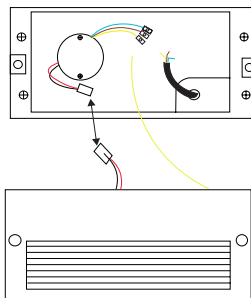


**Step 6:** Connect the live (L), neutral (N), and earth (E) wires from the wall to the corresponding terminals on the LED driver.

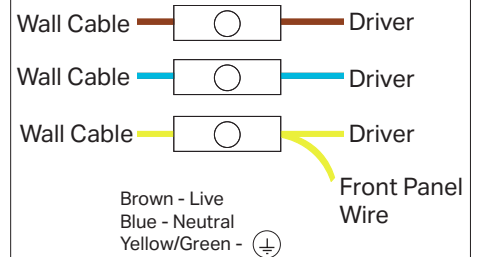

**Step 7:** Align the fixture with the back box

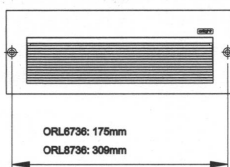

**Step 8:** Screw it in place using the appropriate fixings.

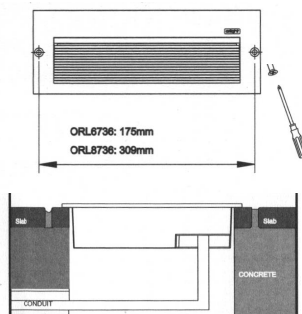

**Step 9:** Once installation is complete and all connections are verified, turn the power back on to test the fitting.

