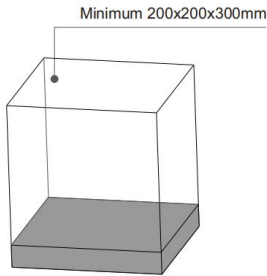
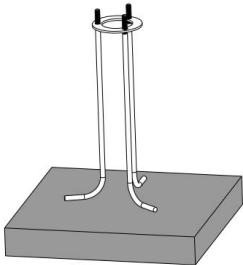
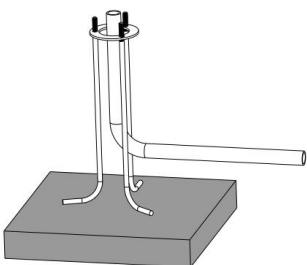
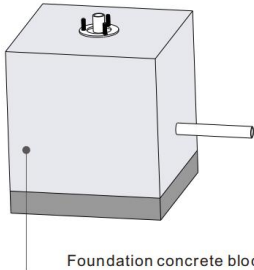
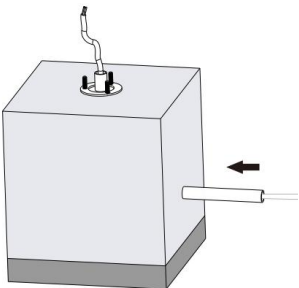
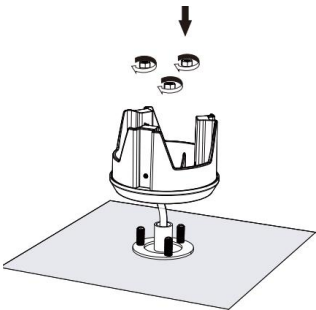
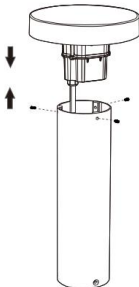
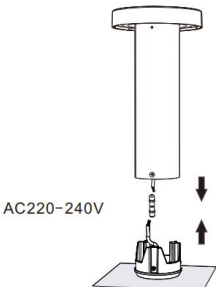


Important Information

- It is recommended that this product is installed / maintained by a fully qualified electrician and wired in accordance with the latest IEC standards or national equivalent.
- Mains power must be switched off during any installation or maintenance.
- This product may contain substances that can be hazardous to the environment if not disposed of properly. Electrical and electronic equipment should never be disposed of with general household waste but must be separated for its correct treatment and recovery. Where possible recycle the packaging.
- For warranty details and full terms and conditions, please visit our website: <https://www.orlight.com/terms-and-conditions>

Installations

Step 1: Dig a hole with minimum size 200mm x 200mm x300mm  Minimum 200x200x300mm	Step 2: Put the J Anchor Bolt Kit into the hole. 	Step 3: Install the conduit tube. 
Step 4: Make sure the bracket plate is flat with ground.  Foundation concrete block.	Step 5: Put the wire through conduit tube. 	Step 6: Fix the mounting plate to the J Anchor Bolt Kit 
Step 7: Fix the bollard head and bollard tube. 	Step 8: Connect the bollard wire to the electricity cable.  AC220-240V	Step 9: Fix the bollard tube onto the mounting base. 